How do you want to hang your shade?
Inside the window frame? Outside the window frame?
There are benefits to each and some important differences.

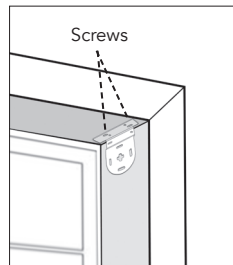## FOLLOW THESE STEP-BY-STEP INSTRUCTIONS

INSIDE MOUNT

OUTSIDE MOUNT
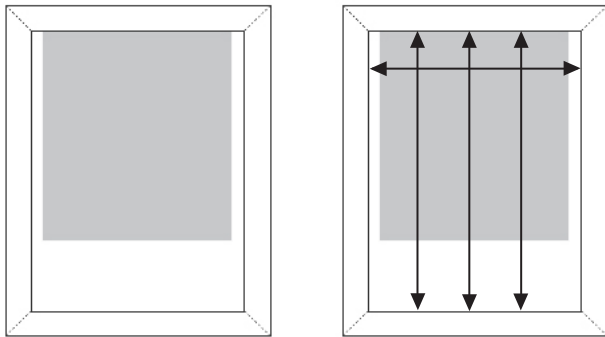
FEATURES:

- Mounted inside the window's frame
- Provides a clean built-in look
- Leaves attractive woodwork exposed
- There is a 3/4" minimum amount of space needed for this mount type. We call this measurement the *minimum mounting requirement.*
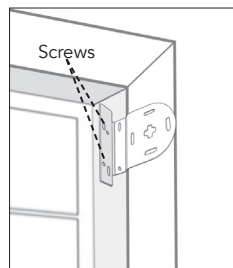

JAMB MOUNT UPWARD

STEP 1

Measure the inside width at the top of your window (to the nearest 1/8"). This is your ordering width. We will make the necessary deductions (approx. 1/8").
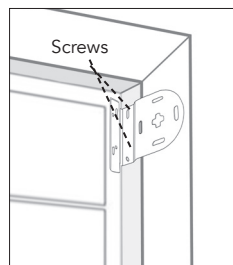
STEP 2

Measure the height at 3 locations - the left side, middle and right side. Record the largest of the 3 measurements. This is your ordering length.
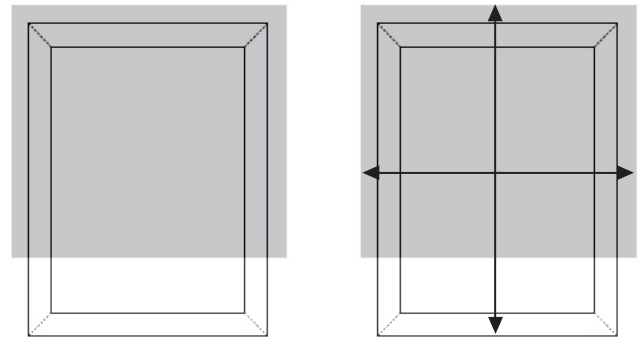

MOUNT ON FRAME

Important Notes:

Shade fabric panels will be approximately 1.5" narrower than your ordering width to allow for brackets. If concerned over resulting light gap, please select outside mount.
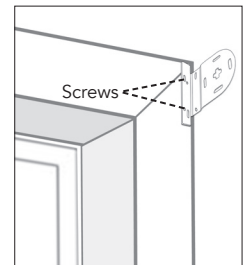

SIDE JAMB MOUNT

FEATURES:

- Mounted outside or on top of the window's frame or wall
- Provides a tailor, more dramatic appearance
- Leaves attractive woodwork exposed
- There is no minimum depth requirement

CASING/FRAME MOUNT

STEP 1

Measure the width of the area you wish to cover. If space allows, we recommend adding 3-4" (1 1/2" - 2"each side) to this measurement to help eliminate light seepage. This is your ordering width and will be the overall measurement bracket to bracket.
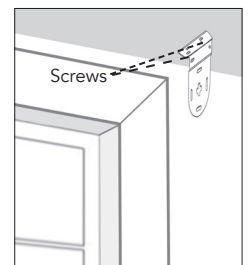
STEP 2

Measure the height of the area you wish to cover. This is your ordering length.
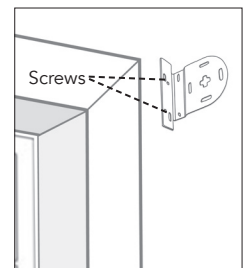
OUTSIDE MOUNT ON WALL

Important Notes:

You shade fabric will be approximately 1.5" narrower than the measurement you provide to allow for brackets. If you need the material to cover a specific width (i.e. for mounting the shade on a door), add 1.5" to the desired fabric width and this will be your ordering width.

CEILING MOUNT